

## **Switch Adjustment Instructions**

### **Transmitter Sound Adjustment**

Low [1 ON] and [2 & 3 OFF]

MED [2 ON] and [1 & 3 OFF]

HIGH [3 ON] and [1 & 2 OFF]

Default setting is [1 ON] and [2 & 3 OFF]



TX/RX-Adjustment  
Switch

### **Receiver Sound Adjustment**

Low [1 ON] and [2 & 3 OFF]

MED [2 ON] and [1 & 3 OFF]

HIGH [3 ON] and [1 & 2 OFF]

The ON position will lock the receiver volume to a pre-set level

Default setting is [1, 2 & 3 OFF]

SW 1 = LOW    SW 2 = MED    SW 3 = HIGH