


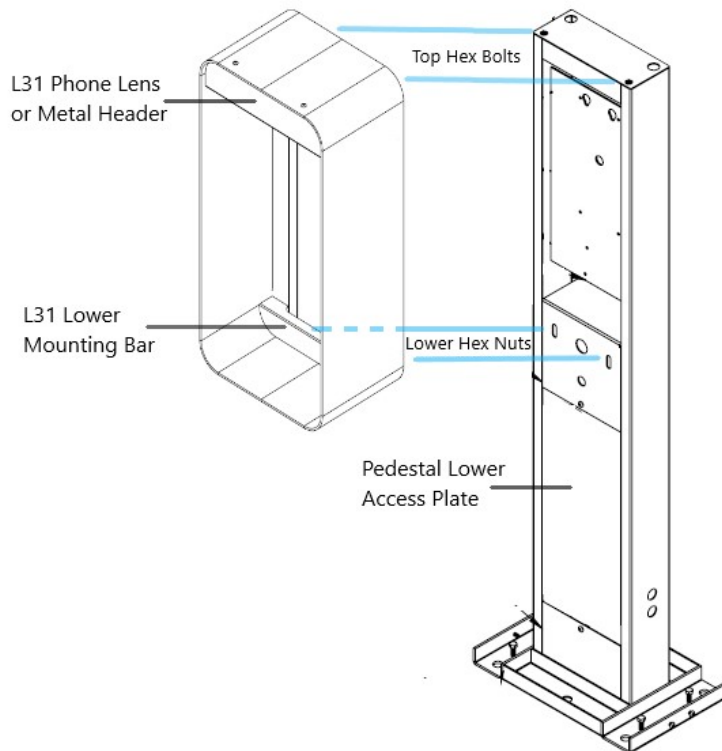

Mounting the L31 enclosure to Pedestal or Wall Mount

1. Remove the two Hex bolts from the top of Pedestal or Wall Mount with a 9/16" socket drive or wrench
2. Remove the security screws on the Pedestal / Wall Mount's Lower Access Plate using a security bit or driver, then remove the plate.
3. Loosen the four security screws that attach the L31 enclosure's Phone lens or metal header using a security bit or driver, then remove the Phone lens / metal header.
4. Remove the two hex nuts on the rear of the L31 enclosure that attach the lower mounting bar using a 1/2" socket drive or wrench, then remove the mounting bar.
5. Position the L31 onto the Pedestal / Wall Mount and align the two upper and two lower mounting holes. Fasten the top Hex bolts first. Then insert the L31 lower mounting bar and fasten the two hex nuts to it from within the Pedestal / Wall Mount's lower access plate area.



G-TEL Enterprises Inc.
16840 Clay Rd. #110 Houston TX 77084
Tel: 1-800-884-4835 | Email: gtel@payphone.com
www.payphone.com | www.armoredphones.com



payphone.com
Quality. Selection. Value.

Global Supplier of Public
Telecommunications Equipment

ARMOREDPHONES.COM
Built To Last.